



4F-1, 236, Fu-Te 2^{nd} Rd., His Chih,

Taipei Hsien, 221, Taiwan

TEL:886-2-6616-6692 · 2694-6687

FAX:886-2-2694-6875 · 2694-5097

Mainboard Changing Process Mercury III

Version: 1.0 May 20, 2014



Revision History:

| Version | Date | Page | CONTENTS |
|---------|--------------|------|---------------|
| 1.0 | May, 20 2014 | | First release |



1. Dismount six screws on the side panel (see red arrows below)



2. Dismount 7 screws (see red circles below) and remove all cables connecting to main board and can change new main board.

