

4F-1, 236, Fu-Te 2<sup>nd</sup> Rd., His Chih,

Taipei Hsien, 221, Taiwan

TEL:886-2-6616-6692 · 2694-6687

FAX:886-2-2694-6875 · 2694-5097

Innovation With a Human Touch

## Y Motor & Auto Focus Cable Changing Process **Spirit**

Version: 1.0 May 20, 2014



Revision History :

	Version	Date	Page	CONTENTS
ſ	1.0	May, 20 2014		First release




1. Dismount 2 screws of top cover(M4 \*8)







## 2. Lift the top cover

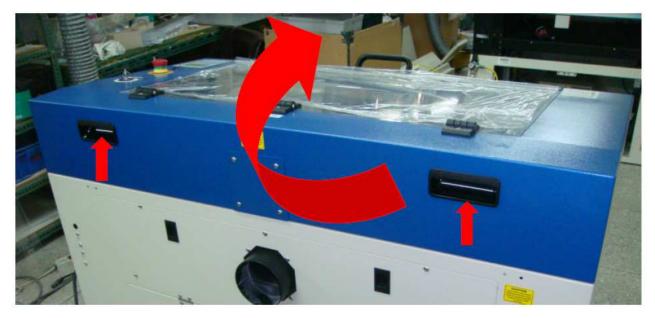


3. Please turn the safety lock switch to LOCK status according to the direction shown on the sticker (see picture) to avoid the collapsing of top cover.








4. Dismount 3 screws of x motor cover (M3 \*6)

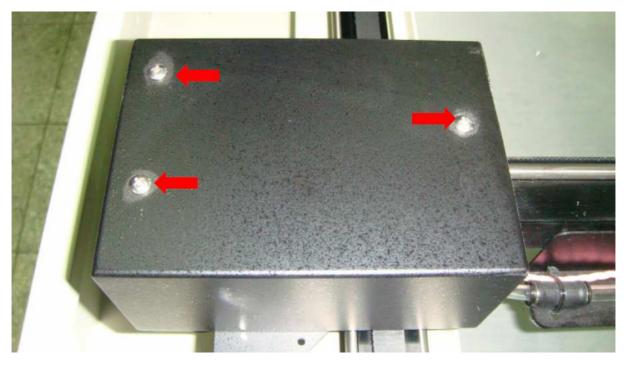


4-1. Dismount 3 screws of x motor idle pulley (Blue circle below). Dismount 4 screws of X motor (M3 \*10,red arrow below) and the x motor cable be removed and changed.

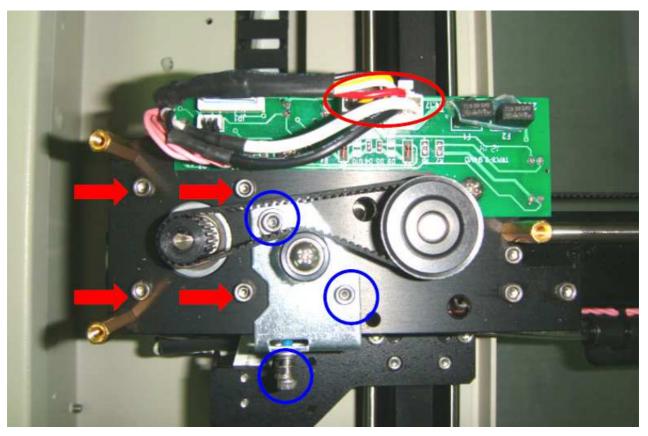



5. For changing auto focus cable, first remove the auto focus cable from x motor pcb (see red circle below).

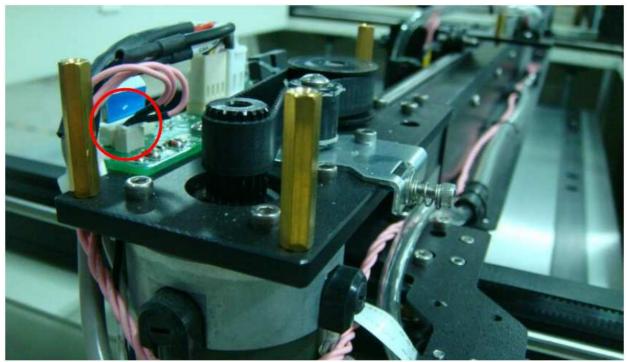

5-1. On lens carriage side, remove the auto focus cable also (it is tight, so use tweezers will be helpful).



5-2. Pull out some joint will be easier to change auto focus cable.

